

Approval body for construction products  
and types of construction

Bautechnisches Prüfamt

An institution established by the Federal and  
Laender Governments



## European Technical Assessment

**ETA-20/0318**  
**of 19 June 2020**

English translation prepared by DIBt - Original version in German language

### General Part

Technical Assessment Body issuing the  
European Technical Assessment:

Trade name of the construction product

Product family  
to which the construction product belongs

Manufacturer

Manufacturing plant

This European Technical Assessment  
contains

This European Technical Assessment is  
issued in accordance with Regulation (EU)  
No 305/2011, on the basis of

Deutsches Institut für Bautechnik

Injection system Hilti HIT-HY 200-R V3 for rebar  
connections

System for post-installed rebar connection with mortar

Hilti Aktiengesellschaft  
Feldkircherstrasse 100  
9494 SCHAAN  
FÜRSTENTUM LIECHTENSTEIN

Hilti Plants

28 pages including 3 annexes which form an integral part  
of this assessment

EAD 330087-00-0601-v01 Edition 03/2020

**European Technical Assessment**

**ETA-20/0318**

English translation prepared by DIBt

**Page 2 of 28 | 19 June 2020**

The European Technical Assessment is issued by the Technical Assessment Body in its official language. Translations of this European Technical Assessment in other languages shall fully correspond to the original issued document and shall be identified as such.

Communication of this European Technical Assessment, including transmission by electronic means, shall be in full. However, partial reproduction may only be made with the written consent of the issuing Technical Assessment Body. Any partial reproduction shall be identified as such.

This European Technical Assessment may be withdrawn by the issuing Technical Assessment Body, in particular pursuant to information by the Commission in accordance with Article 25(3) of Regulation (EU) No 305/2011.

## Specific Part

### 1 Technical description of the product

The subject of this European Technical Assessment is the post-installed connection, by anchoring or overlap connection joint, of reinforcing bars (rebars) in existing structures made of normal weight concrete, using the injection mortar Hilti HIT-HY 200-R V3 in accordance with the regulations for reinforced concrete construction.

Reinforcing bars made of steel with a diameter  $\phi$  from 8 to 32 mm or the Hilti tension anchor HZA-R in sizes M12, M16, M20 and M24 or the Hilti tension anchor HZA in sizes M12, M16, M20, M24 and M27 and Hilti HIT-HY 200-R V3 injection mortar are used for the rebar connection. The steel element is placed into a drilled hole filled with injection mortar and is anchored via the bond between embedded element, injection mortar and concrete.

The product description is given in Annex A.

### 2 Specification of the intended use in accordance with the applicable European assessment Document

The performances given in Section 3 are only valid if the anchor is used in compliance with the specifications and conditions given in Annex B.

The verifications and assessment methods on which this European Technical Assessment is based lead to the assumption of a working life of the rebar connections of 100 years. The indications given on the working life cannot be interpreted as a guarantee given by the producer, but are to be regarded only as a means for choosing the right products in relation to the expected economically reasonable working life of the works.

### 3 Performance of the product and references to the methods used for its assessment

#### 3.1 Mechanical resistance and stability (BWR 1)

Essential characteristic	Performance
Characteristic resistance under static and quasi-static loading	See Annex C1

#### 3.2 Safety in case of fire (BWR 2)

Essential characteristic	Performance
Reaction to fire	Class A1
Resistance to fire	See Annex C2 and C3

### 4 Assessment and verification of constancy of performance (AVCP) system applied, with reference to its legal base

In accordance with European Assessment Document EAD 330087-00-0601-v01, the applicable European legal act is: [96/582/EC].

The system to be applied is: 1

**5 Technical details necessary for the implementation of the AVCP system, as provided for in the applicable European Assessment Document**

Technical details necessary for the implementation of the AVCP system are laid down in the control plan deposited with Deutsches Institut für Bautechnik.

Issued in Berlin on 19 June 2020 by Deutsches Institut für Bautechnik


BD Dipl.-Ing. Andreas Kummerow  
Head of Department

*beglaubigt:*  
G. Lange

## Installed condition


**Figure A1:**

Overlap joint with existing reinforcement for rebar connections of slabs and beams.

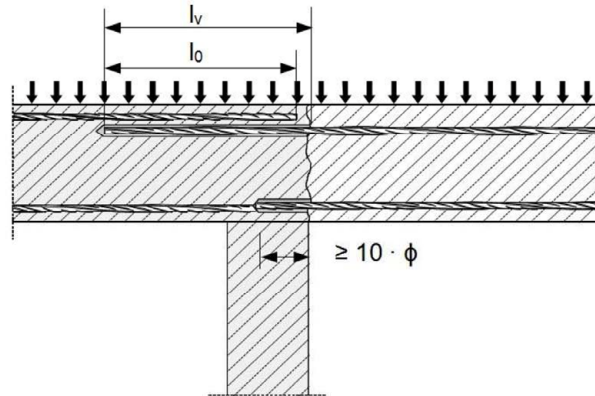


**Figure A2:**

Overlap joint with existing reinforcement at a foundation of a column or wall where the rebars are stressed in tension.

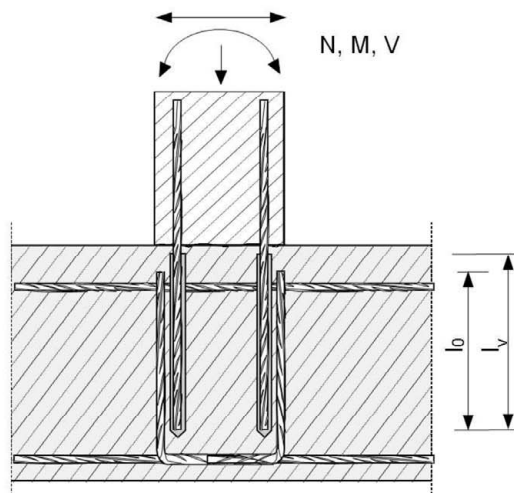

**Figure A3:**

End anchoring of slabs or beams.

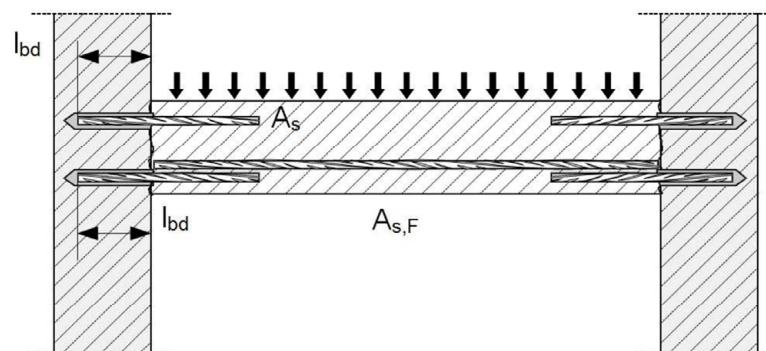


### Injection system Hilti HIT-HY 200-R V3 for rebar connections

#### Product description


Installed condition: application examples of post-installed rebars

#### Annex A1

**Figure A4:**  
Rebar connection for components stressed primarily in compression.

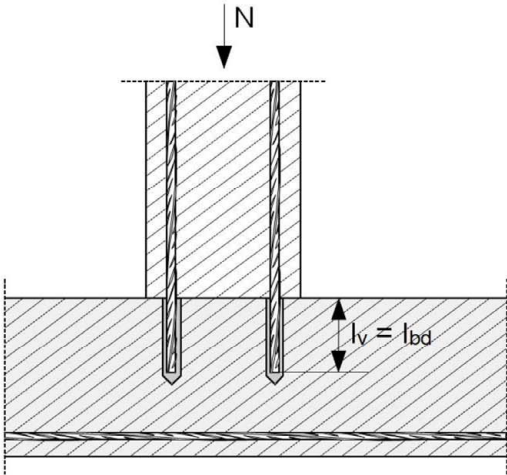

**Figure A5:**  
Anchoring of reinforcement to cover the enveloped line of acting tensile force in the bending member.

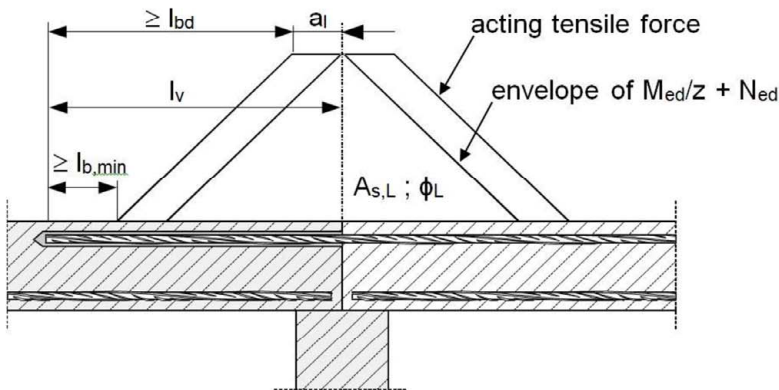

**Note to Figure A1 to Figure A5:**


- In the Figures no transverse reinforcement is plotted, the transverse reinforcement as required by EN 1992-1-1:2004 + AC:2010 shall be present.
- The shear transfer between existing and new concrete shall be designed according to EN 1992-1-1:2004 + AC:2010.
- Preparing of joints according to Annex B2.

The reference to EN 1992-1-1:2004 + AC:2010 is cited in the following document as EN 1992-1-1 only.

Injection system Hilti HIT-HY 200-R V3 for rebar connections	
Product description Installed condition: application examples of post-installed rebars	Annex A2


**Figure A6:**

Overlap joint for the anchorage of a column stressed in bending to a foundation.

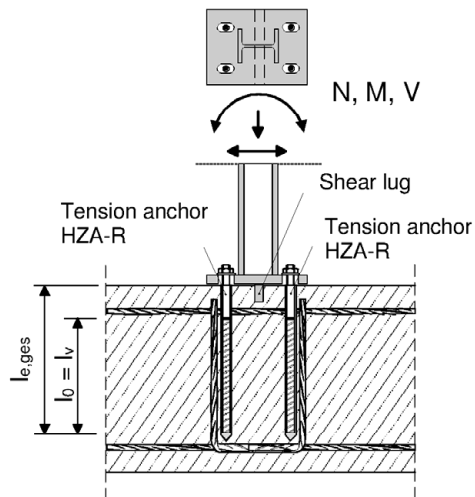


**Figure A7:**

Overlap joint for the anchorage of barrier posts.

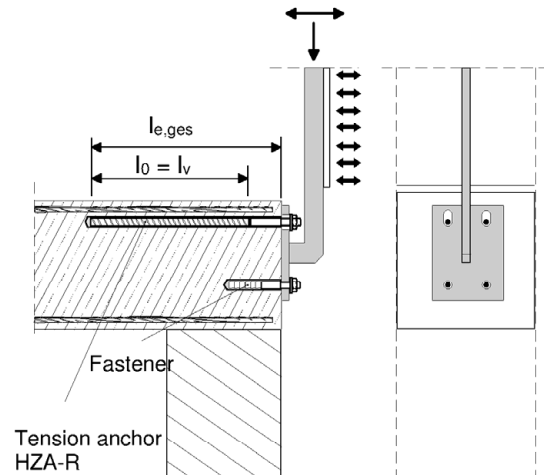

**Figure A8:**

Overlap joint for the anchorage of cantilever members.

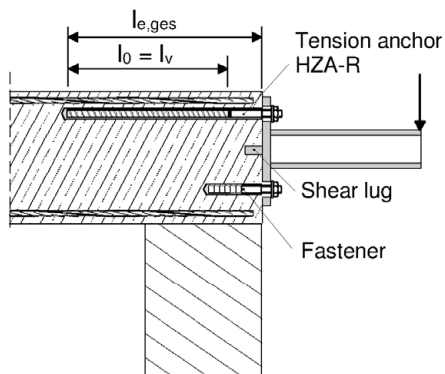

**Note to Figure A6 to A8:**

- In the Figures no transverse reinforcement is plotted, the transverse reinforcement as required by EN 1992-1-1 shall be present.

Injection system Hilti HIT-HY 200-R V3 for rebar connections

Annex A3

**Product description**

Installed condition: application examples of HZA and HZA-R

## Product description: Injection mortar and steel elements

Injection mortar Hilti HIT-HY 200-R V3: hybrid system with aggregate  
330 ml and 500 ml

Marking:  
HILTI HIT  
Production number and  
production line  
Expiry date mm/yyyy



Product name: "Hilti HIT-HY 200-R V3"

## Static mixer Hilti HIT-RE-M




## Steel elements



### Reinforcing bar (rebar): $\phi$ 8 to $\phi$ 32

- Materials and mechanical properties according to Table A1.
- Minimum value of related rib area  $f_R$  according to EN 1992-1-1.
- Rib height of the bar  $h_{rib}$  shall be in the range:  
 $0,05 \cdot \phi \leq h_{rib} \leq 0,07 \cdot \phi$
- The maximum outer rebar diameter over the ribs shall be:  
 $\phi + 2 \cdot 0,07 \cdot \phi = 1,14 \cdot \phi$   
( $\phi$ : Nominal diameter of the bar;  $h_{rib}$ : Rib height of the bar)

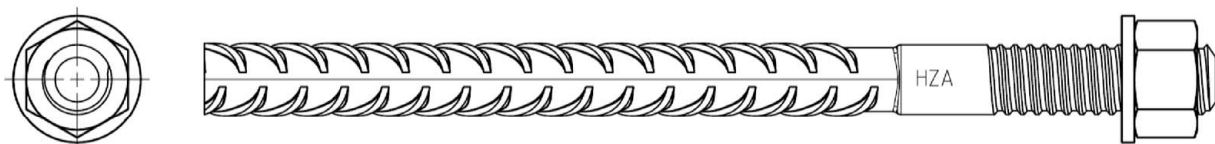

### Hilti Tension Anchor HZA: M12 to M27 and HZA-R: M12 to M24

## Injection system Hilti HIT-HY 200-R V3 for rebar connections

### Product description

Injection mortar / Static mixer / Steel elements

## Annex A4



**Table A1: Materials**

Designation	Material
<b>Reinforcing bars (rebars)</b>	
Rebar EN 1992-1-1	Bars and de-coiled rods class B or C with $f_{yk}$ and $k$ according to NDP or NCL of EN 1992-1-1 $f_{tk} = f_{tk} = k \cdot f_{yk}$
<b>Metal parts made of zinc coated steel</b>	
Hilti tension anchor HZA	Round steel with threaded part: electroplated zinc coated $\geq 5 \mu\text{m}$ Rebar: $f_{yk} = 500 \text{ N/mm}^2$ class B according to NDP or NCL of EN 1992-1-1
Washer	Electroplated zinc coated $\geq 5 \mu\text{m}$ , hot dip galvanized $\geq 45 \mu\text{m}$
Nut	Strength class of nut adapted to strength class of threaded rod. Electroplated zinc coated $\geq 5 \mu\text{m}$ , hot dip galvanized $\geq 45 \mu\text{m}$
<b>Metal parts made of stainless steel corrosion resistance class III according EN 1993-1-4:2006+A1:2015-06</b>	
Hilti tension anchor HZA-R	Round steel with threaded part: Stainless steel 1.4404, 1.4362, 1.4571 EN 10088-1:2014 Rebar: $f_{yk} = 500 \text{ N/mm}^2$ class B according to NDP or NCL of EN 1992-1-1
Washer	Stainless steel 1.4401, 1.4404, 1.4578, 1.4571, 1.4439, 1.4362 EN 10088-1:2014
Nut	Strength class of nut adapted to strength class of threaded rod. Stainless steel 1.4401, 1.4404, 1.4578, 1.4571, 1.4439, 1.4362 EN 10088-1:2014

**Injection system Hilti HIT-HY 200-R V3 for rebar connections**

**Product description**  
Materials

**Annex A5**

## Specifications of intended use

### Anchorage subject to:

- Static and quasi-static loading: rebar size  $\phi 8$  to  $\phi 32$ mm, HZA M12 to M27 and HZA-R M12 to M24.

### Base material:

- Compacted reinforced or unreinforced normal weight concrete without fibers in accordance with EN 206:2013 + A1:2016.
- Strength classes in accordance with EN 206:2013 + A1:2016:  
C12/15 to C50/60 for static and quasi-static loading.  
Maximum chloride content of 0,40 % (CL 0.40) related to the cement content in accordance with EN 206:2013 + A1:2016.
- Non-carbonated concrete.  
Note: In case of a carbonated surface of the existing concrete structure the carbonated layer shall be removed in the area of the post-installed rebar connection with a diameter of  $\phi + 60$  mm prior to the installation of the new rebar. The depth of concrete to be removed shall correspond at least to the minimum concrete cover in accordance with EN 1992-1-1. The foregoing may be neglected if building components are new and not carbonated and if building components are in dry conditions.

### Temperature in the base material:

- **at installation**  
-10 °C to +40 °C
- **in-service**  
-40 °C to +80 °C (max. long term temperature +50 °C and max. short term temperature +80 °C)

### Use conditions for HZA(-R) (Environmental conditions):

- Structures subject to dry internal conditions (all materials).
- For all other conditions according EN 1993-1-4:2006+A1:2015-06 corresponding to corrosion resistance classes Annex A5 Table A1 (stainless steels).

### Design:

- Anchorages are designed under the responsibility of an engineer experienced in anchorages and concrete work.
- Verifiable calculation notes and drawings are prepared taking account of the forces to be transmitted.
- Design under static or quasi-static loading in accordance with EN 1992-1-1.
- The actual position of the reinforcement in the existing structure shall be determined on the basis of the construction documentation and taken into account when designing.

### Installation:

- Use category: dry or wet concrete (not in flooded holes).
- Drilling technique: hammer drilling (HD), hammer drilling with Hilti hollow drill bit TE-CD, TE-YD (HDB), compressed air drilling (CA), or diamond coring with roughening with Hilti roughening tool TE-YRT (RT).
- Overhead installation is admissible.
- Rebar installation carried out by appropriately qualified personnel and under the supervision of the person responsible for technical matters of the site.
- Check the position of the existing rebars (if the position of existing rebars is not known, it shall be determined using a rebar detector suitable for this purpose as well as on the basis of the construction documentation and then marked on the building component for the overlap joint).


Injection system Hilti HIT-HY 200-R V3 for rebar connections

Intended Use  
Specifications

Annex B1

**Figure B1: General construction rules for post-installed rebars**

- Post-installed rebars may be designed for tension forces only.
- The transfer of shear forces between new concrete and existing structure shall be designed in accordance with EN 1992-1-1.
- The joints for concreting must be roughened to at least such an extent that aggregate protrudes.

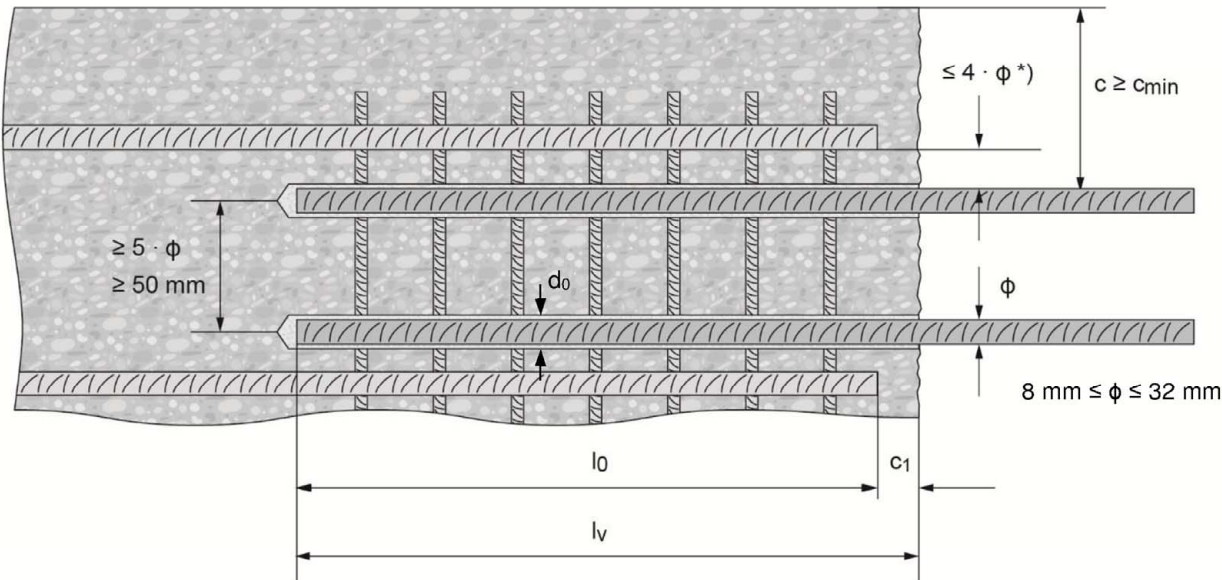

\*) If the clear distance between lapped bars exceeds  $4 \cdot \phi$ , then the lap length shall be increased by the difference between the clear bar distance and  $4 \cdot \phi$ .

- c concrete cover of post-installed rebar  
c<sub>1</sub> concrete cover at end-face of existing rebar  
c<sub>min</sub> minimum concrete cover according to Table B3 and to EN 1992-1-1  
 $\phi$  diameter of reinforcement bar  
l<sub>0</sub> lap length according to EN 1992-1-1  
l<sub>v</sub> embedment length  $\geq l_0 + c_1$   
d<sub>0</sub> nominal drill bit diameter, see Annex B7 to B9


Injection system Hilti HIT-HY 200-R V3 for rebar connections

Intended Use  
General construction rules for post-installed rebars

Annex B2

**Figure B2: General construction rules for Hilti tension anchor HZA and HZA-R**

- Hilti tension anchor HZA / HZA-R may be designed for tension forces only.
- The tension forces must be transferred via an overlap joint to the reinforcement in the existing structure.
- The length of the bonded-in smooth shaft may not be accounted as anchorage.
- The transfer of shear forces shall be ensured by appropriate additional measures, e.g. by shear lugs or by anchors with an European technical assessment (ETA).
- In the anchor plate the holes for the Hilti tension anchor shall be executed as elongated holes with the axis in the direction of the shear force.

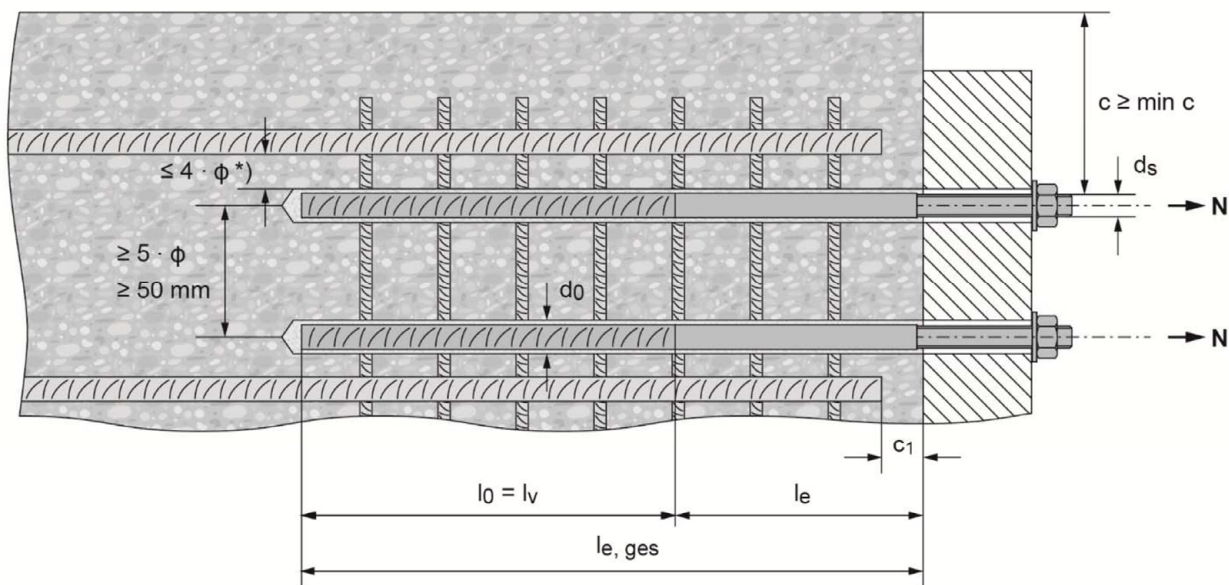

\*) If the clear distance between lapped bars exceeds  $4 \cdot \phi$ , then the lap length shall be increased by the difference between the clear bar distance and  $4 \cdot \phi$ .

- $c$  concrete cover of Hilti tension anchor HZA / HZA-R  
 $c_1$  concrete cover at end-face of existing rebar  
 $c_{min}$  minimum concrete cover according to Table B3 and to EN 1992-1-1  
 $\phi$  diameter of reinforcement bar  
 $l_0$  lap length, according to EN 1992-1-1  
 $l_v$  embedment length  
 $l_e$  length of the smooth shaft or the bonded-in threaded part  
 $l_{e, ges}$  nominal embedment length  
 $d_0$  nominal drill bit diameter, see Annex B4

**Injection system Hilti HIT-HY 200-R V3 for rebar connections**

**Intended Use**  
General construction rules for HZA and HZA-R

**Annex B3**


**Table B1: Hilti tension anchor HZA dimensions**

Hilti tension anchor HZA			M12	M16	M20	M24	M27
Rebar diameter	$\phi$	[mm]	12	16	20	25	28
Nominal embedment length and drill hole depth	$l_{e,ges}$	[mm]	90 to 800	100 to 1000	110 to 1000	120 to 1000	140 to 1000
Embedment length ( $l_v = l_{e,ges} - l_e$ )	$l_v$	[mm]	$l_{e,ges} - 20$				
Length of smooth shaft	$l_e$	[mm]	20				
Nominal diameter of drill bit	$d_0$	[mm]	16	20	25	32	35
Maximum diameter of clearance hole in the fixture	$d_f$	[mm]	14	18	22	26	30
Maximum torque moment	$T_{max}$	[Nm]	40	80	150	200	270

**Table B2: Hilti tension anchor HZA-R dimensions**

Hilti tension anchor HZA-R			M12	M16	M20	M24
Rebar diameter	$\phi$	[mm]	12	16	20	25
Nominal embedment length and drill hole depth	$l_{e,ges}$	[mm]	170 to 800	180 to 1000	190 to 1000	200 to 1000
Embedment length ( $l_v = l_{e,ges} - l_e$ )	$l_v$	[mm]	$l_{e,ges} - 100$			
Length of smooth shaft	$l_e$	[mm]	100			
Nominal diameter of drill bit	$d_0$	[mm]	16	20	25	32
Maximum diameter of clearance hole in the fixture	$d_f$	[mm]	14	18	22	26
Maximum torque moment	$T_{max}$	[Nm]	40	80	150	200

**Hilti Tension Anchor HZA / HZA-R**

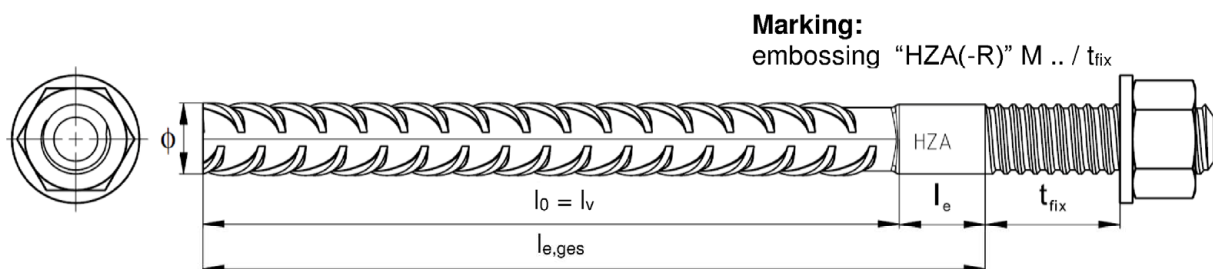

**Injection system Hilti HIT-HY 200-R V3 for rebar connections**


**Intended Use**

Installation parameters for HZA and HZA-R

**Annex B4**

**Table B3: Minimum concrete cover  $c_{min}^{1)}$  of post-installed rebar or tension anchor HZA(-R) depending on drilling method and drilling tolerance**

Drilling method	Bar diameter [mm]	Minimum concrete cover $c_{min}^{1)}$ [mm]	
		Without drilling aid <sup>3)</sup>	With drilling aid <sup>3)</sup>
Hammer drilling (HD) and (HDB) <sup>2)</sup>	$\phi < 25$	$30 + 0,06 \cdot l_v \geq 2 \cdot \phi$	$30 + 0,02 \cdot l_v \geq 2 \cdot \phi$
	$\phi \geq 25$	$40 + 0,06 \cdot l_v \geq 2 \cdot \phi$	$40 + 0,02 \cdot l_v \geq 2 \cdot \phi$
Compressed air drilling (CA)	$\phi < 25$	$50 + 0,08 \cdot l_v$	$50 + 0,02 \cdot l_v$
	$\phi \geq 25$	$60 + 0,08 \cdot l_v \geq 2 \cdot \phi$	$60 + 0,02 \cdot l_v \geq 2 \cdot \phi$
Diamond coring with roughening with Hilti Roughening tool TE-YRT (RT)	$\phi < 25$	$30 + 0,06 \cdot l_v \geq 2 \cdot \phi$	$30 + 0,02 \cdot l_v \geq 2 \cdot \phi$
	$\phi \geq 25$	$40 + 0,06 \cdot l_v \geq 2 \cdot \phi$	$40 + 0,02 \cdot l_v \geq 2 \cdot \phi$

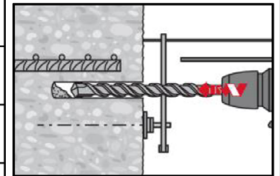

<sup>1)</sup> See Annexes B2 and B3, Figures B1 and B2.

<sup>2)</sup> HDB = hollow drill bit Hilti TE-CD and TE-YD

Comments: The minimum concrete cover acc. EN 1992-1-1 must be observed.

<sup>3)</sup> For HZA(-R)  $l_{e,ges}$  instead of  $l_v$ .

**Table B4: Maximum embedment length  $l_{v,max}$  ( $l_{e,ges,max}$  for HZA(-R)) depending on bar diameter and dispenser**

Elements		Dispensers	
Rebar	Hilti Tension Anchor	HDM 330, HDM 500	HDE 500
		Concrete temperature $\geq -10$ °C	Concrete temperature $\geq 0$ °C
Size	Size	$l_{v,max}$ or $l_{e,ges,max}$ [mm]	$l_{v,max}$ or $l_{e,ges,max}$ [mm]
$\phi$ 8 - 32	HZA M12 to M27 HZA-R M12 to M24	700	1000

**Table B5: Maximum working time and minimum curing time**

Temperature in the base material T	Maximum working time $t_{work}$	Minimum curing time $t_{cure}$
-10 °C to -5 °C	3 h	20 h
-4 °C to 0 °C	1,5 h	8 h
1 °C to 5 °C	45 min	4 h
6 °C to 10 °C	30 min	2,5 h
11 °C to 20 °C	15 min	1,5 h
21 °C to 30 °C	9 min	1 h
31 °C to 40 °C	6 min	1 h




Injection system Hilti HIT-HY 200-R V3 for rebar connections

Intended Use

Minimum concrete cover / Maximum embedment depth  
Maximum working time and minimum curing time

Annex B5

**Table B6: Parameters for use of the Hilti roughening tool TE-YRT**



Associated components			
Diamond coring		Roughening tool TE-YRT	Wear gauge RTG...
			
$d_0$ [mm]		$d_0$ [mm]	Size
Nominal	Measured		
18	17,9 to 18,2	18	18
20	19,9 to 20,2	20	20
22	21,9 to 22,2	22	22
25	24,9 to 25,2	25	25
28	27,9 to 28,2	28	28
30	29,9 to 30,2	30	30
32	31,9 to 32,2	32	32
35	34,9 to 35,2	35	35

**Table B7: Installation parameters for use of the Hilti roughening tool TE-YRT**

$l_v$ [mm]	Roughening time $t_{roughen}^{1)}$ [s]	Minimum blowing time $t_{blowing}^{1)}$ [s]
0 to 100	10	30
101 to 200	20	40
201 to 300	30	50
301 to 400	40	60
401 to 500	50	70
501 to 600	60	80
> 600	$l_v$ [mm] / 10	$t_{roughen}$ [s] + 20

<sup>1)</sup> For HZA(-R)  $l_{e,ges}$  instead of  $l_v$ .

### Hilti roughening tool TE-YRT and wear gauge RTG

Hilti roughening tool TE-YRT	
Wear gauge RTG	

Injection system Hilti HIT-HY 200-R V3 for rebar connections









#### Intended Use

Parameters for use of the Hilti roughening tool TE-YRT

**Annex B6**



**Table B8: Parameters of drilling, cleaning and setting tools for hammer drilling (HD) and compressed air drilling (CA)**

Element	Drill and clean					Installation		
Rebar / Hilti Tension Anchor	Hammer drilling (HD)	Compressed air drilling (CA)	Brush HIT-RB	Air nozzle HIT-DL	Extension for air nozzle	Piston plug HIT-SZ	Extension for piston plug	Maximum embedment length
								-
Size	d <sub>0</sub> [mm]	d <sub>0</sub> [mm]	Size	Size	[-]	Size	[-]	l <sub>v,max</sub> <sup>2)</sup> [mm]
ϕ 8	10	-	10	10	HIT-DL 10/0,8 or HIT-DL V10/1	-	HIT-VL 9/1,0	250
	12	-	12	12		12		1000
ϕ 10	12	-	12	12		12		250
	14	-	14	14		14	1000	
ϕ 12 / HZA- (R) M12	14	-	14	14		14	250	
	16	-	16	16		16	1000	
	-	17	18	16		18	1000	
ϕ 14	18	-	18	18		18	1000	
	-	17	18	18		18	1000	
ϕ 16 / HZA- (R) M16	20	-	20	20	HIT-DL 16/0,8 or HIT-DL B and/or HIT-VL 16/0,7 and/or HIT- VL 16	20	HIT-VL 16/0,7 and/or HIT-VL 16	1000
	-	20	22	20		22		1000
ϕ 18	22	22	22	22		22		1000
ϕ 20 / HZA- (R) M20	25	-	25	25		25		1000
	-	26	28	25		28		1000
ϕ 22	28	28	28	28		28		1000
ϕ 24	32	32	32	32		32		1000
ϕ 25 / HZA- (R) M24	32	32	32			32		1000
ϕ 26	35	35	35			35		1000
ϕ 28 / HZA M27	35	35	35			35		1000
ϕ 30	-	35	35			35		1000
	37	-	37			37		1000
ϕ 32	40	40	40			40		1000

<sup>1)</sup> Assemble extension HIT-VL 16/0,7 with coupler HIT-VL K for deeper drill holes.

<sup>2)</sup> For HZA(-R) l<sub>e,ges,max</sub> instead of l<sub>v,max</sub>.

**Injection system Hilti HIT-HY 200-R V3 for rebar connections**








**Intended Use**

Parameters of drilling, cleaning and setting tools for hammer drilling and compressed air drilling

**Annex B7**



**Table B9: Parameters of drilling and setting tools for hammer drilling with hollow drill bit (HDB)**

Element	Drill (no cleaning required)				Installation		
Rebar / Hilti Tension Anchor	Hammer drilling, hollow drill bit <sup>1)</sup> (HDB)	Brush HIT-RB	Air nozzle HIT-DL	Extension for air nozzle	Piston plug HIT-SZ	Extension for piston plug	Maximum embedment length
							-
Size	d <sub>0</sub> [mm]	Size	Size	[-]	Size	[-]	l <sub>v,max</sub> <sup>3)</sup> [mm]
φ 8	12	No cleaning required			12	HIT-VL 9/1,0	400
φ 10	12				12	HIT-VL 11/1.0	400
	14				14		400
φ 12 / HZA-(R) M12	14				14		400
	16				16		1000
φ 14	18				18		1000
φ 16 / M16	20				20	HIT-VL 16/0,7 and/or HIT-VL 16	1000
φ 18	22				22		1000
φ 20 / HZA-(R) M20	25				25		1000
φ 22	28				28		1000
φ 24	32				32		1000
φ 25 / HZA-(R) M24	32				32		1000

<sup>1)</sup> To be used in combination with Hilti vacuum cleaner with suction volume ≥ 57 l/s.

<sup>2)</sup> Assemble extension HIT-VL 16/0,7 with coupler HIT-VL K for deeper drill holes.

<sup>3)</sup> For HZA-(R) l<sub>e,ges,max</sub> instead of l<sub>v,max</sub>.








**Injection system Hilti HIT-HY 200-R V3 for rebar connections**

**Intended Use**

Parameters of drilling and setting tools for hammer drilling with hollow drill bit

**Annex B8**

**Table B10: Parameters of drilling, cleaning and setting tools for diamond coring with roughening tool (RT)**

Element	Drill and clean				Installation		
Rebar / Hilti Tension Anchor	Diamond coring with roughening (RT)	Brush HIT-RB	Air nozzle HIT-DL	Extension for air nozzle	Piston plug HIT-SZ	Extension for piston plug	Maximum embedment length
							-
Size	d <sub>0</sub> [mm]	Size	Size	[-]	Size	[-]	l <sub>v,max</sub> <sup>2)</sup> [mm]
φ 14	18	18	18	HIT-DL V10/1	18	HIT-VL 11/1,0	1000
φ 16 / HZA-(R) M16	20	20	20	HIT-DL 16/0,8 or HIT-DL B and/or HIT-VL 16/0,7 and/or HIT- VL 16	20	HIT-VL 16/0,7 and/or HIT-VL 16	1000
φ 18	22	22	22		22		1000
φ 20 / HZA-(R) M20	25	25	25		25		1000
φ 22	28	28	28		28		1000
φ 24	32	32	32		32		1000
φ 25 / HZA-(R) M24	32	32			32		1000
φ 26	35	35			35		1000
φ 28 / HZA M27	35	35			35		1000

<sup>1)</sup> Assemble extension HIT-VL 16/0,7 with coupler HIT-VL K for deeper drill holes.

<sup>2)</sup> For HZA-(R) l<sub>e,ges,max</sub> instead of l<sub>v,max</sub>.

**Injection system Hilti HIT-HY 200-R V3 for rebar connections**

**Intended Use**

Parameters of drilling, cleaning and setting tools for diamond coring with roughening tool

**Annex B9**

## Cleaning alternatives

### Manual Cleaning (MC):

Hilti hand pump for blowing out drill holes with diameters  $d_0 \leq 20$  mm and drill hole depths  $\leq 10 \cdot \phi$ .



### Compressed Air Cleaning (CAC):

air nozzle with an orifice opening of minimum 3,5 mm in diameter.



### Automatic Cleaning (AC):

Cleaning is performed during drilling with Hilti TE-CD and TE-YD drilling system including vacuum cleaner.



Injection system Hilti HIT-HY 200-R V3 for rebar connections

**Intended Use**  
Cleaning alternatives

**Annex B10**

## Installation instruction

### Safety Regulations:



Review the Material Safety Data Sheet (MSDS) before use for proper and safe handling!


Wear well-fitting protective goggles and protective gloves when working with Hilti HIT-HY 200-R V3.

Important: Observe the installation instruction provided with each foil pack.

### Hole drilling


Before drilling remove carbonized concrete and clean contact areas (see Annex B1). In case of aborted drill hole the drill hole shall be filled with mortar.

#### a) Hammer drilling

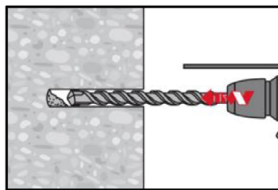


Drill hole to the required embedment length with a hammer drill set in rotation-hammer mode or a compressed air drill using an appropriately sized carbide drill bit.


Hammer drill (HD)



Compressed air drill (CA)




#### b) Hammer drilling with Hilti hollow drill bit TE-CD, TE-YD

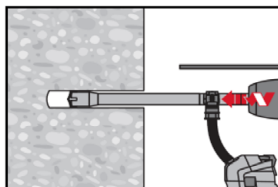

Drill hole to the required embedment length with an appropriately sized Hilti TE-CD or TE-YD hollow drill bit attached to Hilti vacuum cleaner VC 20/40 (-Y) (suction volume  $\geq 57$  l/s) with automatic cleaning of the filter activated. This drilling system removes the dust and cleans the drill hole during drilling when used in accordance with the user's manual.


After drilling is completed, proceed to the "injection preparation" step in the installation instruction.

#### c) Diamond coring with roughening with Hilti roughening tool TE-YRT

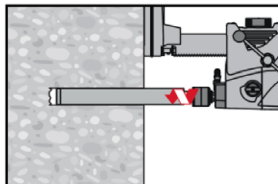

Diamond coring is permissible when suitable diamond core drilling machines and the corresponding core bits are used.

For the use in combination with Hilti roughening tool TE-YRT see parameters in Table B6 and B7.

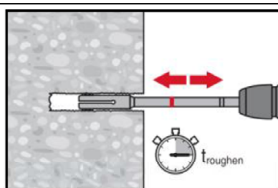

Before roughening water needs to be removed from the drill hole. Check usability of the roughening tool with the wear gauge RTG. Roughen the drill hole over the whole length to the required  $l_v$ .


### Injection system Hilti HIT-HY 200-R V3 for rebar connections

#### Intended Use

Installation instructions

Annex B11


## Splicing applications

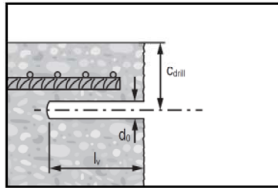


- Measure and control concrete cover  $c$ .
- $C_{drill} = c + d_0/2$ .
- Drill parallel to edge and to existing rebar.
- Where applicable use Hilti drilling aid HIT-BH.

### Drilling aid

For drill hole depths  $> 20$  cm use drilling aid.

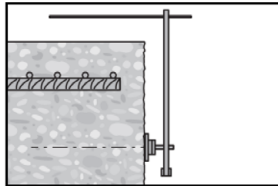

- Ensure that the drill hole is parallel to the existing rebar.  
Three different options can be considered:
- Hilti drilling aid HIT-BH
  - Lath or spirit level
  - Visual check

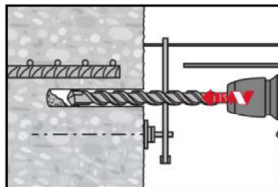


Hole drilling with Hilti drilling aid HIT-BH

### Drill hole cleaning


Just before setting the bar the drill hole must be free of dust and debris.  
Inadequate hole cleaning = poor load values.

### Manual Cleaning (MC)


For drill hole diameters  $d_0 \leq 20$  mm and drill hole depths  $\leq 10 \cdot \phi$ .

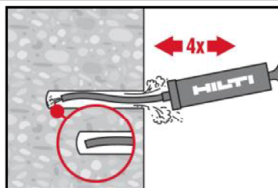

The Hilti hand pump may be used for blowing out drill holes up to diameters  $d_0 \leq 20$  mm and drill hole depths  $\leq 10 \cdot \phi$ .  
Blow out at least 4 times from the back of the drill hole until return air stream is free of noticeable dust.

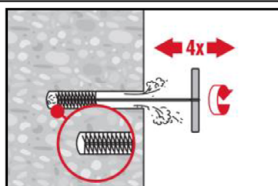

Brush 4 times with the specified brush (see Table B8) by inserting the steel brush Hilti HIT-RB to the back of the hole (if needed with extension) in a twisting motion and removing it.  
The brush must produce natural resistance as it enters the drill hole (brush  $\varnothing \geq$  drill hole  $\varnothing$ ) - if not the brush is too small and must be replaced with the proper brush diameter.

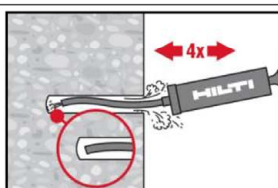







Blow out again with the Hilti hand pump at least 4 times until return air stream is free of noticeable dust.

## Injection system Hilti HIT-HY 200-R V3 for rebar connections

### Intended Use

Installation instructions


Annex B12
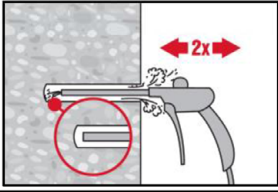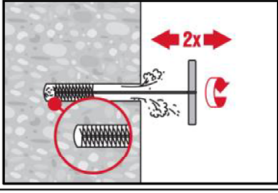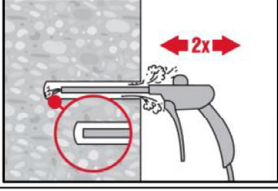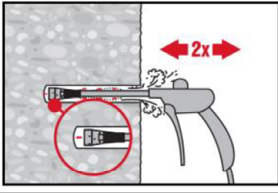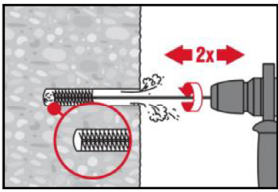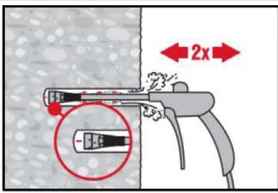
<p><b>Compressed Air Cleaning (CAC)</b></p>	
<p>For <math>\phi</math> 8 to <math>\phi</math> 12 and drill hole depths <math>\leq</math> 250 mm or <math>\phi &gt; 12</math> mm and drill hole depths <math>\leq 20 \cdot \phi</math>.</p>	
	<p>Blow 2 times from the back of the hole (if needed with nozzle extension) over the whole length with oil-free compressed air (min. 6 bar at 6 m³/h) until return air stream is free of noticeable dust.</p> <p>Safety tip: Do not inhale concrete dust.</p>
	<p>Brush 2 times with the specified brush (see Table B8) by inserting the steel brush Hilti HIT-RB to the back of the hole (if needed with extension) in a twisting motion and removing it.</p> <p>The brush must produce natural resistance as it enters the drill hole (brush <math>\phi \geq</math> drill hole <math>\phi</math>) - if not the brush is too small and must be replaced with the proper brush diameter.</p>
	<p>Blow again with compressed air 2 times until return air stream is free of noticeable dust.</p>
<p><b>Compressed Air Cleaning (CAC)</b></p>	
<p>For <math>\phi</math> 8 to <math>\phi</math> 12 and drill hole depths <math>&gt;</math> 250 mm or <math>\phi &gt; 12</math> mm and drill hole depths <math>&gt; 20 \cdot \phi</math>.</p>	
	<p>Use the appropriate air nozzle Hilti HIT-DL (see Table B8).</p> <p>Blow 2 times from the back of the hole over the whole length with oil-free compressed air until return air stream is free of noticeable dust.</p> <p>For drill hole diameters <math>\geq 32</math> mm the compressor has to supply a minimum air flow of 140 m³/h.</p> <p>Safety tip: Do not inhale concrete dust.</p>
	<p>Screw the round steel brush HIT-RB in one end of the brush extension(s) HIT-RBS, so that the overall length of the brush is sufficient to reach the base of the drill hole. Attach the other end of the extension to the TE-C/TE-Y chuck.</p> <p>Brush 2 times with the specified brush (see Table B8) by inserting the steel brush Hilti HIT-RB to the back of the hole (if needed with extension) and removing it.</p> <p>Safety tip: Start machine brushing operation slowly. Start brushing operation once the brush is inserted in the drill hole.</p>
	<p>Use the appropriate air nozzle Hilti HIT-DL (see Table B8).</p> <p>Blow 2 times from the back of the hole over the whole length with oil-free compressed air until return air stream is free of noticeable dust.</p>
<p><b>Injection system Hilti HIT-HY 200-R V3 for rebar connections</b></p>	
<p><b>Intended Use</b> Installation instructions</p>	<p><b>Annex B13</b></p>




### Cleaning of diamond cored holes with roughening with Hilti roughening tool TE-YRT:

For all drill hole diameters  $d_0$  and all drill hole depths.

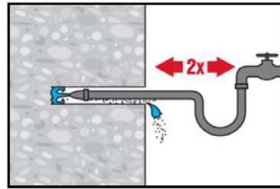


Flush 2 times by inserting a water hose (water-line pressure) to the back of the hole until water runs clear.

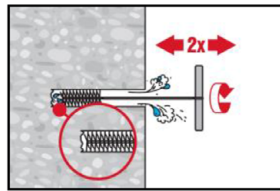


Brush 2 times with the specified brush (see Table B10) by inserting the steel brush Hilti HIT-RB to the back of the hole (if needed with extension) in a twisting motion and removing it.

The brush must produce natural resistance as it enters the drill hole (brush  $\varnothing \geq$  drill hole  $\varnothing$ ) - if not the brush is too small and must be replaced with the proper brush diameter.

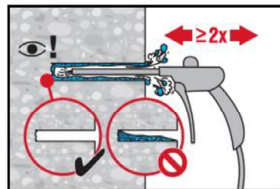


Blow 2 times from the back of the hole (if needed with nozzle extension) over the whole length with oil-free compressed air (min. 6 bar at 6 m<sup>3</sup>/h) until return air stream is free of noticeable dust and water. Remove all water from the drill hole until drill hole is completely dried before mortar injection. Blow time see Table B7. For drill hole diameters  $\geq 32$  mm the compressor has to supply a minimum air flow of 140 m<sup>3</sup>/h.

### Rebar preparation

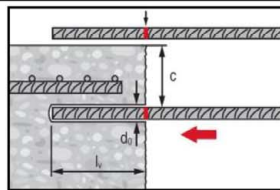

Before use, make sure the rebar is dry and free of oil or another residue. Mark the embedment depth on the rebar (e.g. with tape)  $\rightarrow l_v$  or  $l_{e,ges}$ . Insert rebar in drill hole to verify hole and setting depth  $l_v$  or  $l_{e,ges}$ .


### Injection preparation

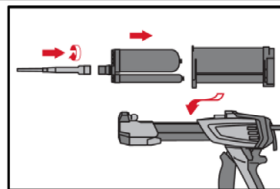

Tightly attach Hilti mixing nozzle HIT-RE-M to foil pack manifold. Do not modify the mixing nozzle.

Observe the instruction for use of the dispenser.

Check foil pack holder for proper function. Insert foil pack into foil pack holder and put holder into dispenser.

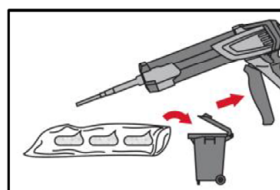

The foil pack opens automatically as dispensing is initiated. Depending on the size of the foil pack an initial amount of adhesive has to be discarded.

Discarded quantities are:

2 strokes for 330 ml foil pack,

3 strokes for 500 ml foil pack,

4 strokes for 500 ml foil pack  $< 5^\circ\text{C}$ .

The minimum foil pack temperature is  $0^\circ\text{C}$ .

### Injection system Hilti HIT-HY 200-R V3 for rebar connections


#### Intended Use

Installation instructions


Annex B14

### Inject adhesive from the back of the drill hole without forming air voids.

#### Injection method for drill hole depth $\leq 250$ mm (without overhead applications)

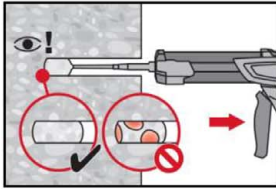


Inject the adhesive starting at the back of the hole, slowly withdrawing the mixer with each trigger pull.  
Fill approximately 2/3 of the drill hole to ensure that the annular gap between the rebar and the concrete is completely filled with adhesive along the embedment length.

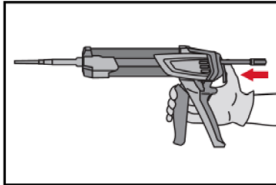


After injection is completed, depressurize the dispenser by pressing the release trigger. This will prevent further adhesive discharge from the mixer.


#### Injection method for drill hole depth $> 250$ mm or overhead applications

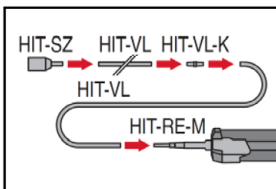


Assemble mixing nozzle HIT-RE-M, extension(s) and piston plug HIT-SZ (see Table B8 and Table B9).  
For combinations of several injection extensions use coupler HIT-VL-K.  
A substitution of the injection extension for a plastic hose or a combination of both is permitted.  
The combination of HIT-SZ piston plug with HIT-VL 16 pipe and HIT-VL 16 tube supports proper injection.

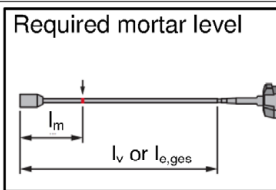

Mark the required mortar level  $l_m$  and embedment depth  $l_v$  ( $l_{e,ges}$  for HZA(-R)) with tape or marker on the injection extension.  
Estimation:  
 $l_m = 1/3 \cdot l_v$  for rebar,  $l_m = 1/3 \cdot l_{e,ges}$  for HZA(-R)  
Precise formula for optimum mortar volume:  
 $l_m = l_v \cdot (1,2 \cdot (\phi^2 / d_0^2) - 0,2)$  for rebar,  $l_m = l_{e,ges} \cdot (1,2 \cdot (\phi^2 / d_0^2) - 0,2)$  for HZA(-R)

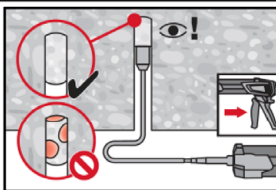

For overhead installation the injection is only possible with the aid of extensions and piston plugs. Assemble HIT-RE-M mixer, extension(s) and appropriately sized piston plug (see Table B8 and Table B9). Insert piston plug to back of the hole and inject adhesive. During injection the piston plug will be naturally extruded out of the drill hole by the adhesive pressure.

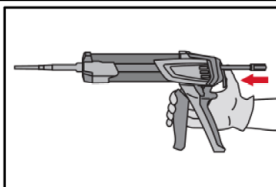

After injection is completed, depressurize the dispenser by pressing the release trigger. This will prevent further adhesive discharge from the mixer.

### Injection system Hilti HIT-HY 200-R V3 for rebar connections


Intended Use  
Installation instructions

Annex B15




## Setting the element

Before use, verify that the element is dry and free of oil and other contaminants.

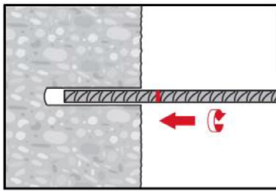


For easy installation insert the rebar into the drill hole while slowly twisting until the embedment mark is at the concrete surface level.

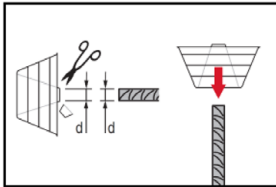


For overhead application:

During insertion of the rebar mortar might flow out of the drill hole. For collection of the flowing mortar HIT-OHC may be used.

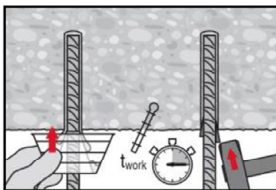


Support the rebar and secure it from falling until mortar has started to harden, e.g. using wedges HIT-OHW.

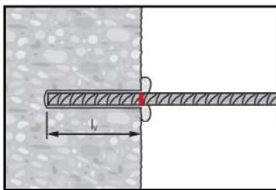


After installing the rebar the annular gap must be completely filled with mortar. Proper installation:

- desired anchoring embedment  $l_v$  is reached: embedment mark at concrete surface.
- excess mortar flows out of the drill hole after the rebar has been fully inserted until the embedment mark.

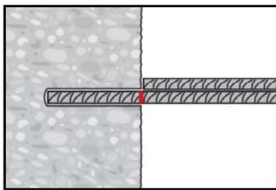

Observe the working time  $t_{work}$  (see Table B5), which varies according to temperature of base material. Minor adjustments to the rebar position may be performed during the working time.

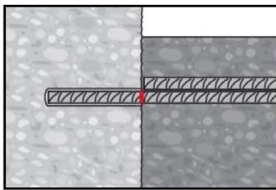

Full load may be applied only after the curing time  $t_{cure}$  has elapsed (see Table B5).

Injection system Hilti HIT-HY 200-R V3 for rebar connections

Intended Use  
Installation instructions

Annex B16

### Minimum anchorage length and minimum lap length under static loading

The minimum anchorage length  $l_{b,min}$  and the minimum lap length  $l_{0,min}$  according to EN 1992-1-1 shall be multiplied by the respective amplification factor  $\alpha_{lb}$  or  $\alpha_{lb,100y}$  given in Table C1.

The design bond strength  $f_{bd,PIR}$  and  $f_{bd,PIR,100y}$  is given in Table C3. It is obtained by multiplying the bond strength  $f_{bd}$  according to EN 1992-1-1 with the respective factor  $k_b$  or  $k_{b,100y}$  according to Table C2.

**Table C1: Amplification factor  $\alpha_{lb}$  and  $\alpha_{lb,100y}$  for hammer drilling (HD) and (HDB), compressed air drilling (CA) and diamond coring with roughening with Hilti roughening tool TE-YRT (RT)**

	Amplification factor $\alpha_{lb} = \alpha_{lb,100y}$ [-]								
Size [mm]	Concrete class								
	C12/15	C16/20	C20/25	C25/30	C30/37	C35/45	C40/50	C45/55	C50/60
$\phi$ 8 to $\phi$ 32 HZA M12 to M27 HZA-R M12 to M24	1,0								

**Table C2: Bond efficiency factor  $k_b$  and  $k_{b,100y}$  for hammer drilling (HD) and (HDB), compressed air drilling (CA) and diamond coring with roughening with Hilti roughening tool TE-YRT (RT)**

	Bond efficiency factor $k_b = k_{b,100y}$ [-]								
Size [mm]	Concrete class								
	C12/15	C16/20	C20/25	C25/30	C30/37	C35/45	C40/50	C45/55	C50/60
$\phi$ 8 to $\phi$ 32 HZA M12 to M27 HZA-R M12 to M24	1,0								

**Table C3: Design values of the bond strength  $f_{bd,PIR}$  and  $f_{bd,PIR,100y}$ <sup>1)</sup> in N/mm<sup>2</sup> for hammer drilling (HD) and (HDB), compressed air drilling (CA) and diamond coring with roughening with Hilti roughening tool TE-YRT (RT)**

	Bond strength $f_{bd,PIR} = f_{bd,PIR,100y}$ [N/mm <sup>2</sup> ]								
Size [mm]	Concrete class								
	C12/15	C16/20	C20/25	C25/30	C30/37	C35/45	C40/50	C45/55	C50/60
$\phi$ 8 to $\phi$ 32 HZA M12 to M27 HZA-R M12 to M24	1,6	2,0	2,3	2,7	3,0	3,4	3,7	4,0	4,3

<sup>1)</sup> According to EN 1992-1-1 for good bond conditions. For all other bond conditions multiply the values by 0,7.

Injection system Hilti HIT-HY 200-R V3 for rebar connections

#### Performances

Amplification factor and bond efficiency factor

Design values of the bond strength  $f_{bd,PIR}$  and  $f_{bd,PIR,100y}$  for static loading

Annex C1

**Bond strengths  $f_{bk,fi}$  at increased temperature for concrete strength classes C12/15 to C50/60 with all drilling methods under static loading**


The respective bond strength  $f_{bk,fi}$  at increased temperature has to be calculated by the following equation:

$$f_{bk,fi} = k_{fi}(\theta) \cdot f_{bd,PIR} \cdot \gamma_c / \gamma_{M,fi}$$

with:  $\theta \leq \theta_{max}$ :  $k_{fi}(\theta) = 24,661 \cdot e^{(-0,013 \cdot \theta)} / (f_{bd,PIR} \cdot 4,3) \leq 1,0$   
and  $\theta > \theta_{max}$ :  $k_{fi}(\theta) = 0,0$   
 $\theta_{max} = 268 \text{ }^{\circ}\text{C}$

$f_{bk,fi}$  Bond strength at increased temperature in N/mm<sup>2</sup>  
 $\theta$  Temperature in  $^{\circ}\text{C}$  in the mortar  
 $\theta_{max}$  Temperature in  $^{\circ}\text{C}$  at which the bond resistance of the mortar is lost  
 $k_{fi}(\theta)$  Temperature reduction factor  
 $f_{bd,PIR}$  Design value of bond strength in N/mm<sup>2</sup> in cold condition according to Table C3 considering concrete class, rebar diameter, drilling method and bond condition according to EN 1992-1-1  
 $\gamma_c$  Partial safety factor according to EN 1992-1-1  
 $\gamma_{M,fi}$  Partial safety factor according to EN 1992-1-2

**Figure C1 Example graph of reduction factor  $k_{fi}(\theta)$  for concrete strength class C20/25 for good bond conditions:**

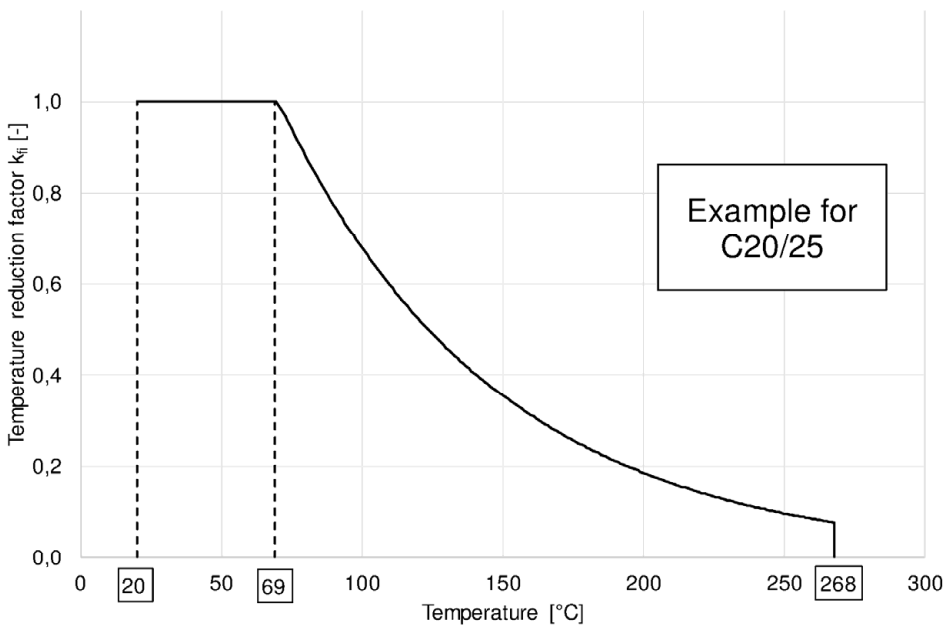

**Injection system Hilti HIT-HY 200-R V3 for rebar connections**

**Performances**

Bond strengths  $f_{bk,fi}$  at increased temperature  
Temperature reduction factor  $k_{fi}(\theta)$  under fire exposure

**Annex C2**

**Table C4: Characteristic tension resistance for steel failure under direct fire exposure for Hilti tension anchor HZA for concrete strength classes C12/15 to C50/60, all drilling methods**

Hilti tension anchor HZA		M12	M16	M20	M24	M27
Characteristic resistance	R30	1,7	3,1	4,9	7,1	9,2
	R60	1,3	2,4	3,7	5,3	6,9
	R90	1,1	2,0	3,2	4,6	6,0
	R120	0,8	1,6	2,5	3,5	4,6

**Table C5: Characteristic tension resistance for steel failure under direct fire exposure for Hilti tension anchor HZA-R for concrete strength classes C12/15 to C50/60, all drilling methods**

Hilti tension anchor HZA-R		M12	M16	M20	M24
Characteristic resistance	R30	2,5	4,7	7,4	10,6
	R60	2,1	3,9	6,1	8,8
	R90	1,7	3,1	4,9	7,1
	R120	1,3	2,5	3,9	5,6

### Design value of the tension resistance for steel failure $N_{Rd,s,fi}$ under direct fire exposure for Hilti tension anchor HZA and HZA-R

The design value of the tension resistance for steel failure  $N_{Rd,s,fi}$  under direct fire exposure for Hilti tension anchor HZA and HZA-R has to be calculated by the following equation:

$$N_{Rd,s,fi} = N_{Rk,s,fi} / \gamma_{M,fi}$$

with:

- $N_{Rk,s,fi}$  Characteristic tension resistance for steel failure under direct fire exposure in kN
- $N_{Rd,s,fi}$  Design value of the tension resistance for steel failure under direct fire exposure in kN
- $\gamma_{M,fi}$  Partial safety factor according to EN 1992-1-2

Injection system Hilti HIT-HY 200-R V3 for rebar connections

#### Performances

Design values of tensile steel strength  $N_{Rk,s,fi}$  for HZA and HZA-R under fire exposure

**Annex C3**